

ARRIVAL ROUTE DESCRIPTION



CLASN TRANSITION (CLASN.SIZLR2)
OYVEY TRANSITION (OYVEY.SIZLR2)

LANDING ALL AIRPORTS: From SIZLR on track 103° to MXIMO, then on track 103° to HITOP, then on track 106° to cross PZUKY at 16000, then on track 106° to cross BITTY at 16000, then on track 106° to cross MORON at 14000, then on track 095° to cross FERNIN at 11000, then on track 123° to cross PSP VORTAC at 9000, then on track 124° to cross DEZZY at 9000, then on track 124°. Expect RADAR vectors to final approach course.

LOST COMMUNICATIONS

PSP LANDING NORTH: Proceed on the RNAV (RNP) Y RWY 31L approach.
PSP LANDING SOUTH: Proceed on the RNAV (RNP) Z RWY 13R approach.

PALM SPRINGS INTL ATIS 118.25
SOCAL APP CON 134.0 278.3
PALM SPRINGS INTL TOWER ★ 119.7 377.05
BERMUDA DUNES UNICOM 122.8
JACQUELINE COCHRAN UNICOM 123.0

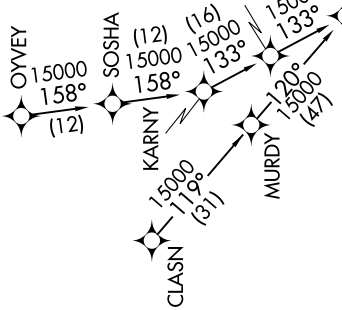

NOTE: RADAR required.
NOTE: RNAV 1.
NOTE: DME/DME/IRU or GPS required.
NOTE: Turbojet and turboprop aircraft only.

NOTE: Chart not to scale.

