

(ROCKY9.ROCKY) 17117
ROCKY NINE DEPARTURE

AL-5438 (FAA)

INDIANAPOLIS EXECUTIVE (TYQ)
 INDIANAPOLIS, INDIANA


AWOS-3PT
 120.725
 INDIANAPOLIS DEP CON
 124.65 127.15 317.8
 CTAF
 123.050

**TOP ALTITUDE:
 ASSIGNED BY ATC**

SPINNER
 112.7 SPI $\text{---}\cdot\cdot\cdot$
 Chan 74
 N39°50.38'-W89°40.66'
 L-27, H-5

TERRE HAUTE
 115.3 TTH $\text{---}\cdot\cdot\cdot$
 Chan 100
 N39°29.34'-W87°14.94'

BRICKYARD
 116.3 VHP $\text{---}\cdot\cdot\cdot$
 Chan 110

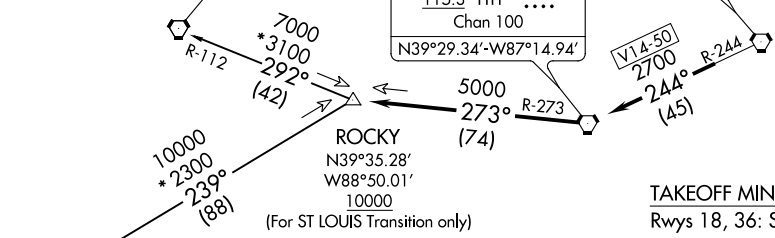

ROCKY
 N39°35.28'
 W88°50.01'
 10000
 (For ST LOUIS Transition only)


TAKEOFF MINIMUMS
 Rwy 18, 36: Standard.

TAKEOFF OBSTACLE NOTES

Rwy 18: Tree 1870' from DER, 524' left of centerline, 52' AGL/971' MSL.
 Rwy 36: Poles 1115' from DER, 321' left of centerline, 33' AGL/958' MSL.
 Multiple trees beginning 1257' from DER, 320' right of centerline, up to 80' AGL/999' MSL. Multiple trees beginning 2266' from DER, left and right of centerline, up to 126' AGL/1035' MSL.

ST LOUIS
 117.4 STL $\text{---}\cdot\cdot\cdot$
 Chan 121
 N38°51.64'-W90°28.94'
 L-27, H-5

- NOTE: RADAR required.
- NOTE: Select appropriate localizer/DME frequency/channel prior to departure.
- NOTE: Turbojets accelerate to 250K until reaching 10000, if unable advise ATC.
- NOTE: Assigned to aircraft with a requested altitude of 11000 or above.

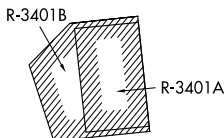

NOTE: Chart not to scale.

DEPARTURE ROUTE DESCRIPTION

DEPARTING ALL OTHER AUTHORIZED RUNWAYS/AIRPORTS: Climb on assigned heading to assigned altitude. Thence

. . . . expect RADAR vectors to join VHP R-244 to TTH VORTAC, then via TTH R-273 to ROCKY INT then via transition or assigned route. Expect clearance to requested altitude ten minutes after departure.

SPINNER TRANSITION (ROCKY9.SPI): From over ROCKY INT on SPI R-112 to SPI VORTAC.
ST LOUIS TRANSITION (ROCKY9.STL): From over ROCKY INT on STL R-059 to STL VORTAC.

ROCKY NINE DEPARTURE
(ROCKY9.ROCKY) 31MAR16

INDIANAPOLIS, INDIANA
 INDIANAPOLIS EXECUTIVE (TYQ)

EC-2, 04 JAN 2018 to 01 FEB 2018

EC-2, 04 JAN 2018 to 01 FEB 2018