LOC/DME I-FWA	APP CRS	Rwy Idg	8001
109.9	321°	TDZE	800
Chan 36		Apt Elev	815

ILS or LOC RWY 32

FORT WAYNE INTL (FWA)

ASR

DME required. For inop ALS, increase S-ILS 32 Cat E visibility to RVR 4000, S-LOC 32 Cat E visibility to RVR 6000. Use I-FWA DME when on the localizer course. # RVR 1800 authorized with use of FD or AP or HUD to DA.

MALSR

MISSED APPROACH: Climb to 3000 then left turn on FWA VORTAC R-285 to TELEY INT/FWA 17.5 DME and hold.

ATIS	FORT WAYNE APP CON	FORT WAYNE TOWER	GND CON	CLNC DEL
121.25 360.825	127.2 284.6	119.1 269.325	121.9 348.6	124.75

DME or RADAR REQUIRED

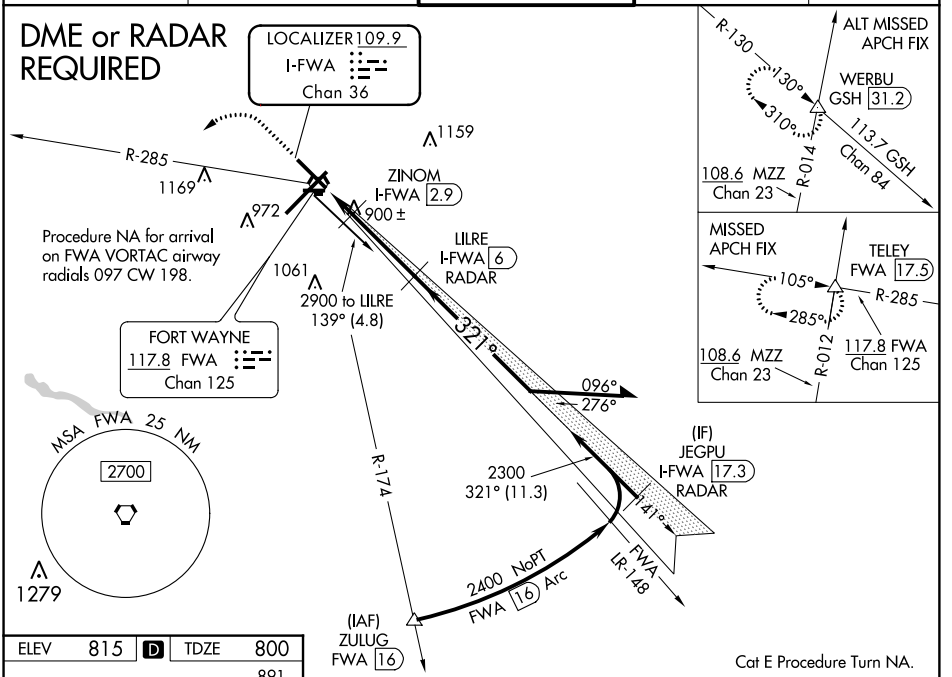

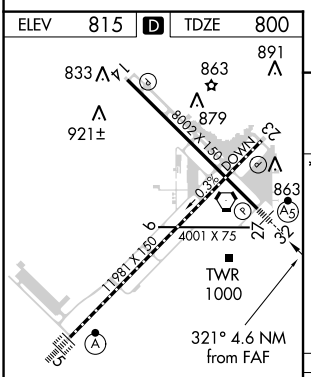

TDZ/CL Rwy 5
REIL Rwys 14 and 23
HIRL Rwys 5-23 and 14-32

FAF to MAP 4.6 NM

Knots	60	90	120	150	180
Min:Sec	4:36	3:04	2:18	1:50	1:32

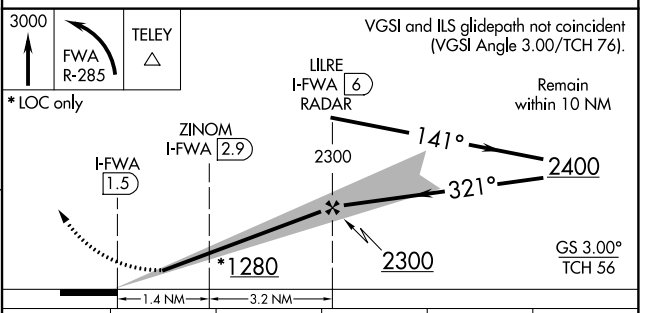

CATEGORY	A	B	C	D	E
S-ILS 32	#1000/24 200 (200-½)				
S-LOC 32	1160/24 360 (400-½)		1160/40 360 (400-¾)		
C CIRCLING	1300-1 485 (500-1)		1420-1¾ 605 (700-1¾)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)

EC-2, 01 FEB 2018 to 01 MAR 2018
EC-2, 01 FEB 2018 to 01 MAR 2018